

Outdoor Power box WP20

WP24
Outdoor box

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERTANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING DO JUALIFIED SERVICE PERSONNEL



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USERS AUTHORITY TO OPERATE THE EQUIPMENT.


CE COMPLIANCE STATEMENT

WARNING: THIS IS A CLASS A PRODUCT. IN A DOMESTIC ENVIRONMENT THIS PRODUCT MAY CAUSE RADIO INTERFERENCE IN WHICH CASE THE USER MAY BE REQUIRED TO TAKE A DEGUATE MEASURES.

CAUTION: BEFORE ATTEMPTING TO CONECT OR OPERATE THIS PRODUCT, PLEASE READ THE LABEL ON THE BOTTOM AND USER'S MANUAL CAREFULLY

Introduction


information about these products, and important notices which should be read before starting the installation. Please note that improper installation or use other than described in this manual may cause damage to the device, and avoid the warranty Welcome to the user's manual for WP20 and WP24. This manual will provide you basic

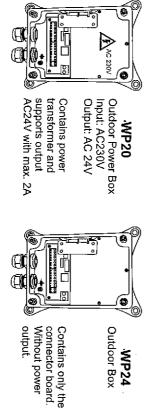

Accessories

Specifications(

WP20 only):

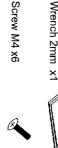



Power Input: AC220V / 0.3A Power Output:AC24V / 1.8A Temperature:-20C to 70C


Rubber Washer x4

Technical specification are subjects to change without prior notice. This manual may contain clerical or printing error. All trademarks mentioned in this manual belong to their respective owners.

(applicable only for WP20) Safety Instructions before starting

- system installers. - Refer all work related to the installation of this product to qualified service personnel or
- maintenance. No user-serviceable parts inside. Contact qualified service personnel in case of
- caused by improper transportation avoid the warranty extreme pressure, vibration and humidity during transportation and storage. Damages \cdot Do not strike or shake, as this may damage the appliance. It should be protected against
- 90% humidity exists. Use this device within -20°C to +70°C(-4°F to 140°F) and a humidity below Do not use the dome camera in an extreme environment where high temperature or high
- wet areas. It may damage the appliance and cause electric shock. - Do not expose the indoor model of dome camera to water or moisture, not try to operate it in
- electric safety standard are followed when using or installing the appliance - Read this user's manual carefully before operating the appliance. Make sure that local
- Make sure that the installation is done according to the local electricity safety regulation of Do not install and operate this appliance in a flammable and explosive environment
- your country.
- power source. · Before installation and maintenance, make sure that the appliance is disconnected from the
- your country lightning rob for protection. Please refer to the industrial safety regulation and request of transformer stations, it is necessary to use additional lightning-proof equipments or - In a thunderstorm area or region with high inductive voltage, such as high voltage

Connections

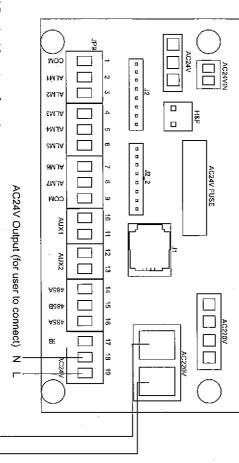

- AC24V IN: AC output from transformator
- AC24V Output: output connector to Speed Dome Camera

AC220V Input (for user to connect)

z

- J2: Alarm interface 1 (Input 1-4 / Output 1) to Speed Dome H&F: Fuse-protected output for Heater & Fan
- J2-2: Alarm interface 2 (Input 5-7 / Output 2) to Speed Dome
- J1: RS485 to Speed Dome (RJ-11Type)
- JP9: Wiring Connectors. Please refer to the drawing above for details

connection purpose and has no power source function. In case of doubt please contact dealer for further Note: please note that the power supply is only applicable to WP20. WP24 contains only the PCB for